 


When sleep mode is activated in cooling mode the preset temperature will decrease by 2°C within 2 hours and the unit will keep operating in this temperature. When sleep mode is activated in heating mode the preset temperature will increase by 2°C within 2 hours and the unit will keep operating in this temperature.

SPECIFICATIONS

Rated Voltage:	220-240 V
Rated Frequency:	50 Hz
Phases:	1
Cooling Capacity:	3520 W
Heating Capacity:	3520 W
Max Operation Input:	1550 W
Max Operation Current:	6.9 A
Defrosting Method:	Automatic
Operation Temperature:	16-30 °C
Net Weight:	40 kg
Gross Weight:	45 kg

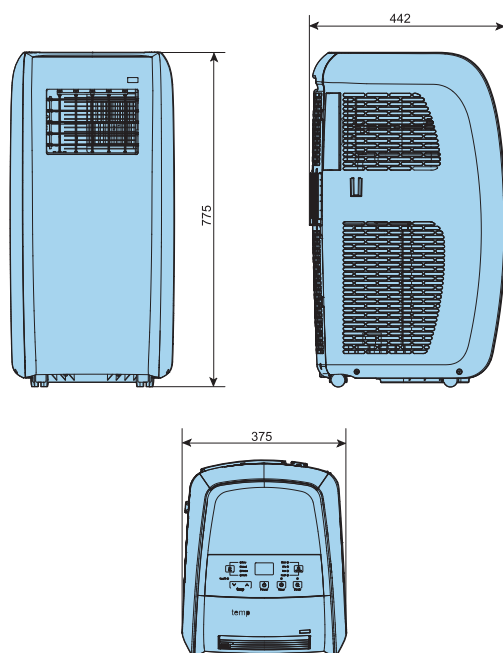

EQUIPMENT CARE

If H8 displays on the LCD control panel then the condensate tray is full.

Remove the bung from the rear hose and drain the water.

Never push the equipment beyond its design limits. If it will not do what you want with reasonable ease and speed, assume you have the wrong equipment for the job. Contact HSS Hire for advice.

Keep the equipment clean - you will find this less of a chore if you clean it regularly, rather than wait until the end of the hire period.

Only use the air conditioner for the purpose it was designed for. Improper use may cause expensive damage and could be dangerous.

When not in use, store the equipment somewhere clean, dry and secure.

FINISHING OFF

Switch off the unit by pressing the Power button. Unplug it from its power supply and coil the power supply cable and give the unit a final clean up ready for return, to HSS Hire.



... have you been trained

The law requires that personnel using this type of equipment in the workplace must be competent and qualified to do so.

Training is available at HSS Training
0845 766 7799

...any comments?

If you have any suggestions to enable us to improve the information within this guide please e-mail your comments or write to the Safety Guide Manager at the address below
e-mail: safety@hss.com

©HSS Hire Service Group Ltd 2021 No. 338/01

Group Office: Building Two, Think Park, Mosley Road,

 
Trafford Park, Manchester, M17 1FQ.

Web Site: <http://www.hss.com>

338/01

Operating & Safety Guide 338

HSS Hire

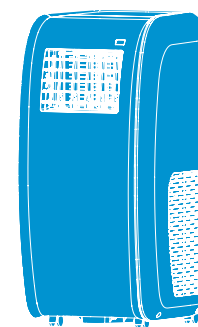

Compact Air Conditioner

Medium size multifunctional air conditioner ideal for cooling, heating and great as a fan and dehumidifier



Code 57III

GENERAL SAFETY

For advice on the safety and suitability of this equipment contact HSS Hire.

There is a serious risk of personal injury if you do not follow all instructions laid down in this guide.

The hirer has a responsibility to ensure that all necessary risk assessments have been completed prior to the use of this equipment.

This equipment should only be used by an operator who has been deemed competent to do so by his/her employer.

This equipment should be used by a competent adult who has read and understood these instructions. Anyone with either a temporary or permanent disability, should seek expert advice before using it.

Keep children, animals and bystanders away from the work area. Cordon off a NO GO area using cones and either barriers or tape, available for hire from HSS Hire.

 **Never use this equipment if you are ill, feeling tired, or under the influence of alcohol or drugs.**

Always transport and store the unit in an upright position, never lay it on its side.

Never touch the heat exchanger fins with bare hands.

Ensure the work area is well lit and ventilated, if in doubt, ask about lighting and ventilation equipment at HSS Hire.

Keep your fingers and clothing away from any moving parts.

 **Never touch the compressor or refrigerant piping without wearing gloves.**

 This equipment is heavy (45kg), never attempt to lift it, always get help.

Do not use this equipment without the air filter.

Never leave the unit running and unattended.

When positioning the unit, consider the floor surface.

Avoid placing the unit directly on to carpet or any other surface that maybe easily damaged.

Clear the site after installation.

Never install the unit in a place where a combustible gas might leak, or it may lead to fire or explosion.

Never wash the unit with water.

Should any emergency occur, stop the unit and disconnect the power immediately.

Check the condition of the equipment before use. If it shows signs of damage or excessive wear, return it to HSS Hire.

ELECTRICAL SAFETY

The HSS Compact Air Conditioner plugs into a standard 230V 13amp power socket.

If the equipment fails, or if its power supply cable or plug becomes damaged, return it. Never try to repair it yourself.

Keep cables out of harm's way, and clear of the work area.

Extension leads should be fully unwound and loosely coiled, away from the equipment. Never run them through water, over sharp edges or where they could trip someone.

Always remove the plug from the power socket before undertaking any type of intervention, or if it is left unattended or within children or people's reach not quite conscious of their own actions.

 
 
Before removing the plug, switch off the machine.

When unplugging pull the plug, not the supply cable.

 To reduce the risk of electric shock, always use a suitable RCD (Residual Current-Operated Device) available from HSS Hire.

Ensure the unit and power socket are switched OFF before plugging into the power supply.

IDENTIFIER

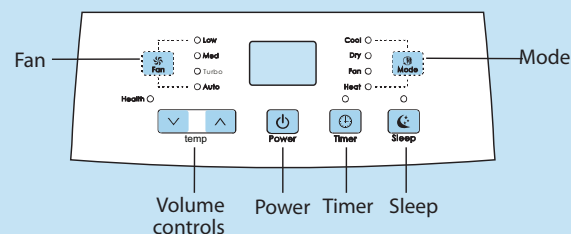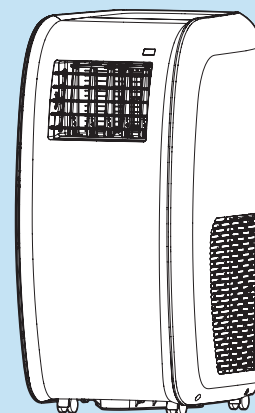

You may receive various air conditioner models.

 
Please note that ONLY model GREE GPH12AJK3NNA1D has a heat function.

GETTING STARTED

Never use the HSS Compact Air Conditioner until you have fully read and understood this User Guide and the machine has been properly set up using the information it contains.

INSTALLATION


The length of the exhaust pipe should be between 50 - 150 cm. The shorter the better air flow. The pipe should be positioned as flat as possible. **Do not prolong the pipe or extend with another exhaust**

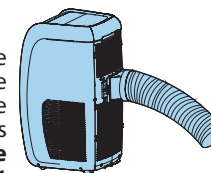


pipe. Doing so may cause abnormal operation.

When installing exhausting pipe to the wall the hole should at about 40 - 100 cm from the floor.

 If the exhaust pipe requires to be bent please consider following solutions:

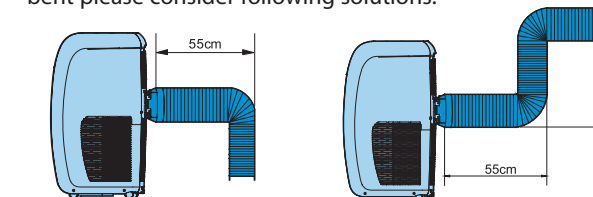

 Avoid bending the exhaust pipe too much. Sharp bends can cause abnormal operation.

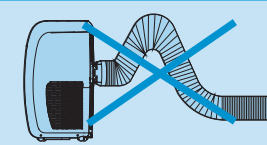

CONTROLS AND FUNCTIONS

To start or stop the unit press the **Power** button.

You can choose between 4 operation modes. Press **Mode** button and select either **Cool**, **Dry**, **Fan** or **Heat**.

Control temperature with **up** and **down** volume buttons. Please note, this applies only in **Cool** and **Heat** modes. Pressing **up** or **down** buttons will increase or decrease temperature by 1 °C. The minimum temperature can be set to 16 °C and maximum to 30 °C.

In order to use fan press **Fan** button and select either **Low**, **Med** (Medium), **Turbo** or **Auto**.

The unit has a timer function. By pressing **Timer** button you enter into the timer setting mode. With **up** or **down** buttons you can adjust the timer. After time is set up the unit will display temperature. To cancel the timer just press **Timer** button again.

The sleep function is available for heating and cooling only. Activate sleep by pressing **Sleep** button.

Know Your Symbols

HSS have created clear Icons to inform the hirer of their responsibilities towards the safe use of hire equipment.

These are designed to reduce the amount of different safety information labels required for each product for hire.

General use PPE / Warning

Clearly marked minimum PPE will be visible on all equipment,



Correct PPE must be worn



HAV Hand Arm Vibration



Danger Rotating blade



Danger Hot exhaust



Danger Electric shock



Caution Abrasive Wheel



Caution Finger trap

Fuel and Supply Types



Pe
Petrol



Di
Diesel



2t
2 - Stroke Petrol



EI
Electric

Safe Procedures

All hirers must understand and respect the safe procedures of all equipment.

It is the responsibility of the hirer to maintain and return the equipment in a clean condition and good working order.



Ro
Read OPS Guide



Ou
Outdoor Use only



HI
Heavy Lifting



Cd
Check Oil daily



 
Cf
Check Fuel daily



Cw
Check Water daily



Bc
Battery Care

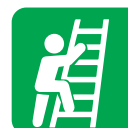

Sh
Safe Height Working



Swl
Refer to Data Plate



 
V
Check Power Voltage Data Plate

Electrical Safety

Safe wiring procedures.



Ea
Must be Earthed Class 1

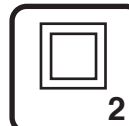

Doi
Double Insulated Class 2



Enl
Earth Live Neutral Wire Coding

Return Responsibility

Charges apply to equipment returned dirty and damaged.



Cc
Cleaning Charge



Rc
Repair Charge